


# XC-56BB



\* When the image input board is connected

Connection Diagram P77

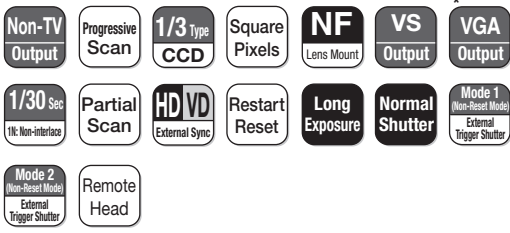

## Outline

The XC-56BB is a small-sized head-detachable monochrome camera module that incorporates a 1/3-type progressive scan CCD. The XC-56BB has the same camera function as those of XC-56. The XC-56BB has VGA-class resolution output at 30 fps. The XC-56BB is a compact model succeeding to the XC-55BB with the dimensions of 22 (W) × 22 (H) × 30 (D) for the camera head and 29 (W) × 29 (W) × 67 (D) for the control part.

## Features


- Incorporating a 1/3-type progressive scan CCD
- Non-TV format
- Square pixel/ Full pixel read-out
- VGA-class resolution image output, 30 fps.
- Partial scanning function
- External trigger shutter
  - Restart/Reset
  - Mode 1 (Non-reset mode)
  - Mode 2 (Reset mode)
- Various settings are available on the rear panel
- Cable Length: 2 m

## Accessories


- Compact camera adaptor
  - DC-700/700CE
- 12-pin camera cable (CE standard)
  - CCXC-12P02N (2 m)
  - CCXC-12P10N (10 m)
  - CCXC-12P05N (5 m)
  - CCXC-12P25N (25 m)
- C-mount adaptor
  - LO-999CMT
- NF-mount LENS
  - VCL-03S12XM
  - VCL-06S12XM
  - VCL-12S12XM
- Tripod adaptor
  - VCT-333I (for CHU)
  - VCT-55I (for CCU)

## Dimensions

### • CHU

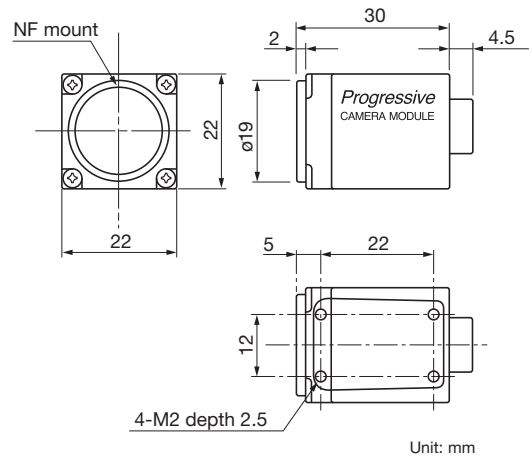


### • CCU

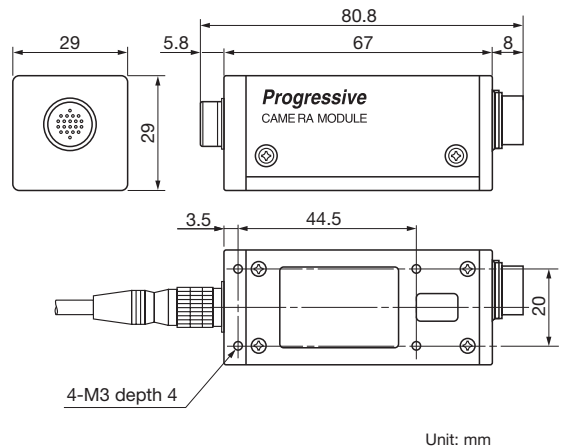

Digital Video Camera XCG  
 XCD  
 XCL  
 Intelligent XCI  
 Analog Video Camera XC (Non-TV Format)  
 XC (TV Format)  
 Accessories  
 Color Camera Module FCB  
 Color PTZ Camera EVI

## Spectral Sensitivity Characteristics


### • XC-56BB

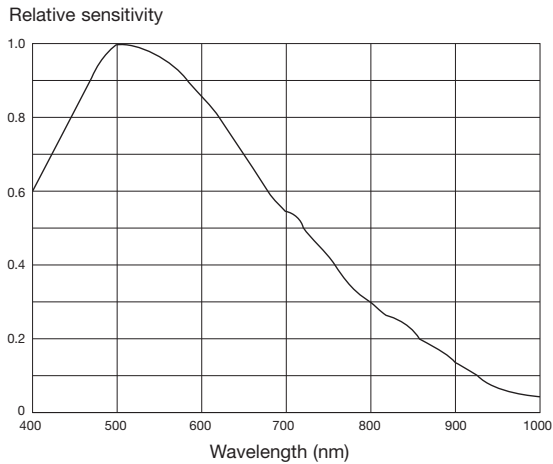

(Lens characteristics and light source characteristics excluded.)

## Supplied Accessories

### Dedicated cable CCU and CHU

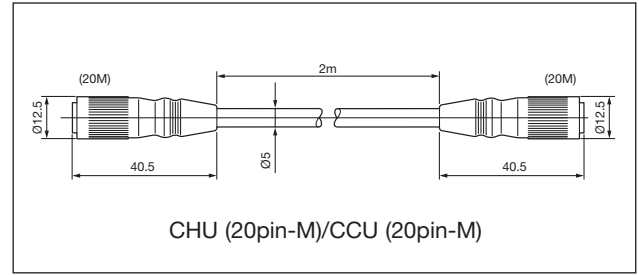


## Specifications

<b>XC-56BB</b>	
Image device	1/3-type Progressive Scan IT CCD
Effective picture elements (H) × (V)	659 × 494
Effective lines (H) × (V)	647 × 493
Output image size (H) × (V)	VGA class (647 × 494)
Cell size (H) × (V)	7.4 μm × 7.4 μm
Lens mount	NF-mount
Flange focal length	12.0 mm
Sync system	Internal/External (automatically switched according to input signal)
External synchronization input/output <sup>1</sup>	HD/VD (HD/VD level: 2 V to 5 Vp-p, 75 Ω)
Allowable frequency deviation of external synchronization	±1% (in horizontal synchronous frequency)
H jitter	Less than 20 ns
Scan lines	525 line/263 line (Normal mode/Binning mode)
Video output mode	Normal: 1 line sequential output 29.97 fps/Binning: 2 line sequential output 59.94 fps
Video output	1.0 Vp-p, sync negative, 75 Ω unbalanced
Horizontal frequency	15.734 kHz
Output signal frequency	29.97 Hz (Normal mode)/59.94 Hz (Binning mode)
Horizontal resolution	500 TV lines
Sensitivity	400 lx F8 (γ= OFF, FIX GAIN (0 dB))
Minimum illumination	0.5 lx (F1.4, γ= OFF, GAIN 18 dB)
Video S/N ratio	58 dB
Gain	Fixed/Manually adjustable
Gamma	OFF (γ = 1) (fixed)
White clip	820 mV ± 70 mV
Shutter mode	Normal shutter, Restart/Reset, External trigger shutter (Mode 1/Mode 2)
Normal shutter speed (sec)	1/100, 1/125, 1/250, 1/500, 1/1,000, 1/2,000, 1/4,000, 1/8,000, 1/15,000
External trigger shutter (sec)	DIP switch settings: 1/100, 1/125, 1/250, 1/500, 1/1,000, 1/2,000, 1/4,000, 1/10,000, 1/25,000, 1/50,000, 1/100,000 Trigger pulse width settings: 1/4 to 1/100,000
External trigger	Polarity: +, Width: 2 μs to 250 ms, Input impedance: 10 kΩ or more (H: 2 V to 5.0 V, L: 0 V to 0.6 V)
Partial scan	R/R mode Binning off: max: 120 fps (Effective line: 102) Binning on: max: 180 fps (Effective line: 59)
	External trigger Binning off: max: 120 fps (Effective line: 100) Binning on: max: 120 fps (Effective line: 105)
Pin assignment	Correspondence to EIAJ compliant 12PIN connector pin assignment Unavailable (No.8 pin: Trigger input (G), No.9 pin: Trigger input, No.10 pin: GRD, No.11pin: +12 V) Pins No.10 and 11 are not connected inside the camera
Power requirements	DC 12 V (10.5 V to 15.0 V)
Power consumption	2.2 W
Dimensions	CHU: 22 (W) × 22 (H) × 30 (D) mm CCU: 29 (W) × 29 (H) × 67 (D) mm (not including projecting parts)
Mass	CHU: 40 g CCU: 100 g
Operating temperature	-5°C to +45°C
Storage temperature	-30°C to +6°C
Performance guarantee temperature	0°C to 40°C
Operating humidity	20% to 80% (no condensation)
Storage humidity	20% to 95% (no condensation)
Vibration resistance	10 G (20 Hz to 200 Hz) 20 minutes for each direction - x, y, z
Shock resistance	70 G
MTBF	73,800 hours (Approx. 8.4 years)
Regulatory compliance	UL6500, FCC/ICES-003: Class B, CE: EN61326, AS/NZ: EN61326, KC: KN22/KN24: Class A
Supplied accessories	Lens mount cap (1), Operating instructions (1), Dedicated cable (1), Ferrite core (1)


The values for mass and dimension are approximate.

<sup>1</sup> Automatic switching in response to the presence of an input signal when the switch on the rear panel is set to EXT.

## Location and Function of Parts and Controls

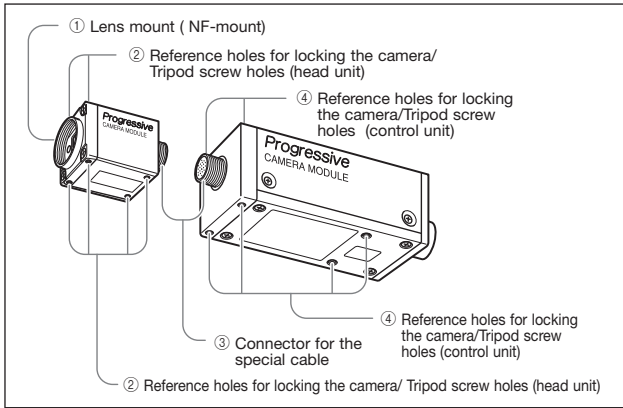

### ① Lens mount (NF-mount)

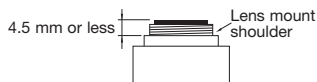

If you install a C-mount lens on the Camera, you will need the C-mount adaptor LO-999CMT.

#### Note

For installing a C-mount lens on the XC56BB

- If you install a C-mount lens on the XC56BB, you will need the C-mount adaptor LO-999CMT (sold separately). Be sure that the lens does not project more than 4.1 mm from the lens mount.
  - For setting the camera when using C-mount adaptor, fix the lens mount (C-mount) instead of fixing the camera head in order to avoid applying unnecessary forces to the camera head.
  - Avoid using C-mount adaptor in the places where vibrations or shocks are applied often. Doing so will damage the equipment or loosen the connection.
- ② Reference holes for locking the camera/Tripod screw holes (head unit)  
You can attach a tripod to the reference holes (4) on the bottom. You will need a tripod adaptor VCT-3331 to install the tripod. There are two more reference holes on the front of the top surface.

#### Note

- The XC-56BB head unit (CHU) must have the same serial number as the control unit (CCU).
- Do not connect or disconnect the supplied cable while the power is turned on, otherwise the camera may be damaged.


### ③ Connector for the special cable

Connect the head unit and the control unit with the supplied cable.

### ④ Reference holes for locking the camera/Tripod screw holes (control unit)

High-precision screw holes for locking the camera onto the lens mounted surface. Locking the camera minimizes optical axis deviation. For details, see the Application Guide. You can attach a tripod to the reference holes on the bottom of the head unit. You will need a tripod adaptor VCT-551 to install the tripod. There are two more reference holes on the front of the top surface.

## Rear Panel

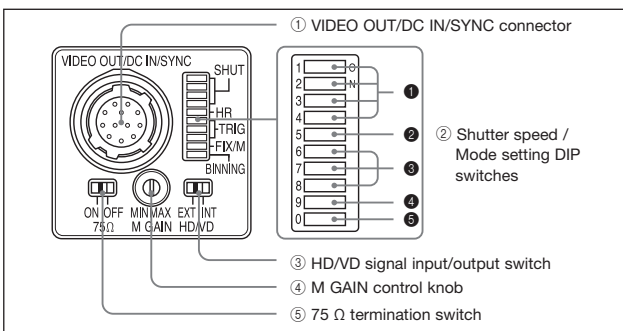

#### Note

Be sure to turn the power off before making switch settings. As the variable controller for manual adjustment is a small precise component, do not apply force more than required when adjusting. Doing so will break the component. The controller is not a 360-degree rotation type. Do not turn the controller beyond the stopper of the component. The range of rotation is about 260 degrees. For the adjustment of the variable controller, use a flathead screwdriver. The sizes of a recommended flathead screwdrivers are 1.9 mm width, 0.5 mm thickness and more than 0.45 mm length.

### ① VIDEO OUT/DC IN/SYNC (video output/DC power/sync input signal) connector (12-pin connector)

Connect a CCXC-12P05N camera cable to this connector to obtain power from the +12 V DC power supply and also to enable video signal output from the camera module. When a sync signal generator is connected to this connector, the camera module is synchronized with the external sync signals (HD/VD signals).

### ② Shutter speed/Mode setting DIP switch

#### ① Shutter speed (bits 1-4)

Set an appropriate shutter speed (factory setting: OFF).

#### ② Partial scan mode switch (bit 5)

The factory setting of this switch is Partial scan OFF. If you turn this switch ON to use high-rate scan mode, you also need to make pulse rate settings.

#### ③ Restart reset/External trigger shutter mode switch (bits 6 to 8)

By inputting an external restart/reset signal, you can capture the information of single screens at arbitrary timing. By inputting an external trigger signal, you can capture fast-moving objects at precise locations. The factory settings for these switches are for normal operation.

#### ④ Gain switch (bit 9)

This switch selects FIX (fixed) or MANUAL (manual adjustment) (factory setting: FIX (left side)).

#### ⑤ Binning mode switch (bit 0)

Switches the video signal output mode between binning OFF and binning ON (factory setting: OFF).

### ③ HD/VD signal input/output switch

Set the switch to INT to output HD/VD signals from the camera module. Set the switch to EXT to input HD/VD signals from an external unit (factory setting: EXT).

#### Note

Even when the switch is set to EXT, the camera module operates in internal synchronization mode unless an external HD signal is input. In this case, however, the camera module will not output internal sync signals.

### ④ M GAIN (Manual Gain) control knob

If you have selected MANUAL (manual adjustment) with DIP switch 4, this knob adjusts the gain. The dimensions of the groove on the knob are 0.5 (W) × 1.9 (L) × 0.45 (D) mm.


Use a screwdriver that is appropriate for these dimensions.

The knob can be rotated 260 degrees. Do not rotate the knob over the stopper on the limit point.

### ⑤ 75 Ω termination switch

Turn this to OFF when not terminating the external sync signal (factory setting: ON).

## Connector Pin Assignments

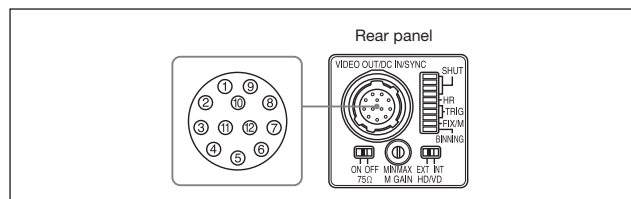

Pin No.	Camera sync output	External mode (HD/VD)	Restart/Reset	External trigger shutter
1	Ground	Ground	Ground	Ground
2	+12 V DC	+12 V DC	+12 V DC	+12 V DC
3	Video output (Ground)	Video output (Ground)	Video output (Ground)	Video output (Ground)
4	Video output (Signal)	Video output (Signal)	Video output (Signal)	Video output (Signal)
5	HD output (Ground)	HD input (Ground)	HD input (Ground)	HD input (Ground)
6	HD output (Signal)	HD input (Signal)	HD input (Signal)	HD input (Signal)
7	VD output (Signal)	VD input (Signal)	Reset (Signal)	VD input (Signal)
8	—	—	—	—
9	—	—	—	—
10	—	—	—	Trigger pulse input (Signal)
11	—	—	—	—
12	VD output (Ground)	VD input (Ground)	Reset (Ground)	VD input (Ground)*

\* Common ground for pins 7, 10, and 11

## About the Electronic Shutter

There are two shutter types: normal shutter and external trigger shutter. Select them with the DIP switches on the rear panel.

\*1 The electronic shutter cannot be used in restart/reset mode.

\*2 Partial scan can be used in restart/reset mode and in external trigger shutter mode 1.

## Normal Shutter

This mode provides continuous video output with the electronic shutter selected by switches to capture a high-speed moving object clearly.

Normal Shutter	Other modes*
8 <input type="checkbox"/>	8 <input type="checkbox"/>

\* "Other modes" refers to restart/reset mode and external trigger shutter mode.

### • Normal shutter speed settings

1/125	1/250	1/500	1/1000
1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>
2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>
3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>
4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>
1/2000	1/4000	1/8000	1/15000
1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>
2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>
3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>
4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>
1/100			
1 <input type="checkbox"/>			
2 <input type="checkbox"/>			
3 <input type="checkbox"/>			
4 <input type="checkbox"/>			

(Unit: seconds)

## External Trigger Shutter

Inputting an external trigger pulse enables the camera to capture first-moving objects clearly. Set DIP switches 6, 7, and 8 on the rear panel to Mode 1 or Mode 2. When you set the trigger pulse width to 1/3 of a second or more, the output signal changes to the normal VIDEO signal.

Mode 1	Mode 2	Partial scannig	
6 <input type="checkbox"/>	6 <input type="checkbox"/>	OFF	ON
7 <input type="checkbox"/>	7 <input type="checkbox"/>	5 <input type="checkbox"/>	5 <input type="checkbox"/>
8 <input type="checkbox"/>	8 <input type="checkbox"/>		

(Partial mode is compatible with Mode 1 only.)

### Note

- After turning on the camera, since the first external trigger pulse is used for mode setting of the camera, the first frame image is invalid. This is the case for all modes when external trigger shutter is used.
- High-rate scan mode cannot be used while in external trigger shutter mode 2.

There are two modes for the timing in which video signals are obtained.

### • Mode 1 (Non-reset mode)

- In this mode, a video signal synchronized with a VD signal is output after a trigger pulse is input.
  - The video signal is synchronized with the external VD signal when an external HD\*/VD signal is input.
  - The video signal is synchronized with an internal VD signal when no external HD\*/VD signal is input.

\* External or internal synchronization is selected automatically depending on the presence or absence of external HD input.

### • Mode 2 (Reset mode)

- In this mode, an internal VD is reset, then a video signal is output a certain period of time after trigger pulse input.

## To Set the External Trigger Shutter


There are two ways to set the shutter speed.

### • Using trigger pulse width

Set all DIP switches (1 to 4 on the rear panel) to OFF.

You can obtain an arbitrary shutter speed by setting the trigger pulse width to the range of 2  $\mu$ sec to 250 msec.

Exposure time = Trigger pulse width + 8  $\mu$ sec

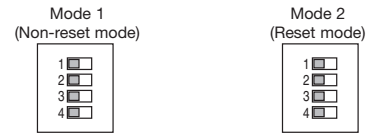

### Note

An incorrect video signal will be output if you input a new trigger pulse before the video signal output for the previous trigger pulse is output completely.

### • Using the DIP switches on the rear panel

For shutter speeds, see the following table.

Mode 1 (Non-reset mode)/Mode 2 (Reset mode)			
1/125	1/250	1/500	1/1000
1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>
2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>
3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>
4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>
1/2000	1/4000	1/10000	1/25000
1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>
2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>
3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>
4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>
1/50000	1/100000	1/100	
1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	
2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	
3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	
4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	


(Unit: seconds)

## Restart/Reset

### To Set Restart/Reset Mode

This mode allows you to capture the information on single screens at any time by externally inputting restart/reset signals (HD/VD). To enter this mode, set the trigger shutter switches (6 to 8) on the rear panel of the camera as shown in the figure below.

To use restart/reset mode and Partial scan mode simultaneously, set the Partial scan mode switch (5) to ON (right side).

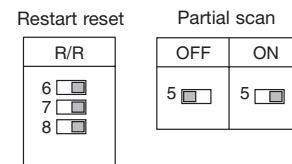

## Long Exposure

The Restart/Reset function extends the CCD accumulation time, resulting in highly sensitive image capture. This function is effective when you cannot gain satisfactory sensitivity under normal operating conditions, or when you want to observe the trail of a moving object. Extend the VD interval (T) between external VD pulses.

### Example of input timing chart

